

Контроллер SR-1009EA (12-24V, 384-768W)



FEATURE

- Work with different sender
- Work with WIFI transmitter
- Control RGBW, RGB, CC-CW, Single color LED lighting


PARAMETER

| Part No. | Iuput Voltage | Current | Output | Remarks |
|------------|---------------|---------|---------------|------------------|
| SR-1009FA | 12-36VDC | 4x5A | 4x(60-180)W | Constant voltage |
| SR-1009EA | 12-24VDC | 4x8A | 4x(96-192)W | Constant voltage |
| SR-1009FA3 | 12-36VDC | 4x350mA | 4x(4.2-12.6)W | Constant current |
| SR-1009FA7 | 12-36VDC | 4x700mA | 4x(8.4-25.2)W | Constant current |


Suitable sender

| RGB+W remote | SR-2818, SR-2819, SR-2819S, SR-2838 | | |
|---------------------------|--|--|--|
| CCT remote | SR-2819CCT, SR-2819S-CCT, SR-2838-CTT | | |
| Dimmer remote | SR-2819S-DIM, SR-2838-DIM, SR-2833 | | |
| RGB+W wall mounted panel | SR-2820/ SR-2820(IT)/ SR-2820(US), SR-2835RGB | | |
| CCT wall mounted panel | SR-2822/ SR-2822 (IT) / SR-2822(US), SR-2825B/ SR- 2825(IT) / SR-2825(US)/SR-2830B/ SR-2830 (IT) / SR- 2830(US), SR-2835DIM | | |
| Dimmer wall mounted panel | SR-2833k1, SR-2833k2, SR-2833T1/ SR-2833T1 (IT) / SR-2833T1(US), SR-2833T2/SR-2833T2 (IT)/ SR-233T2(US), SR-2835DIM, SR-2825A SR-2825A (IT)/ SR-2825A(US), SR-2830A/ SR-2830A (IT)/ SR-2830A(US) | | |

PRODUCT SIZE

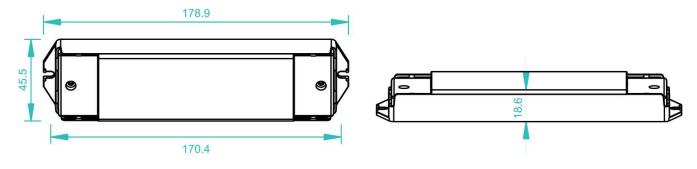


BRIEF INTRODUCTION OF BUTTONS

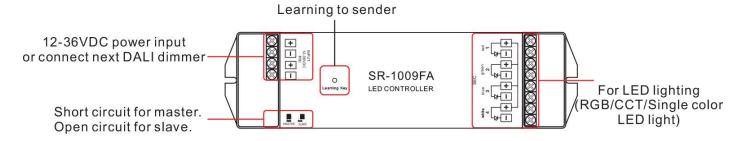


WIRING DIAGRAM

• Receiver Connection Diagram for Single Unit

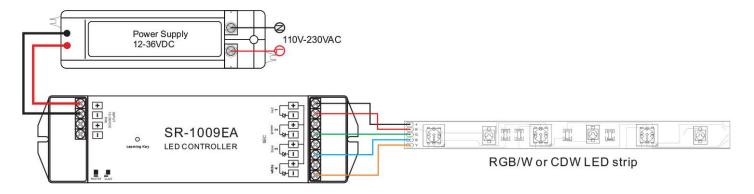

Receiver Connection Diagram for Multiple Units

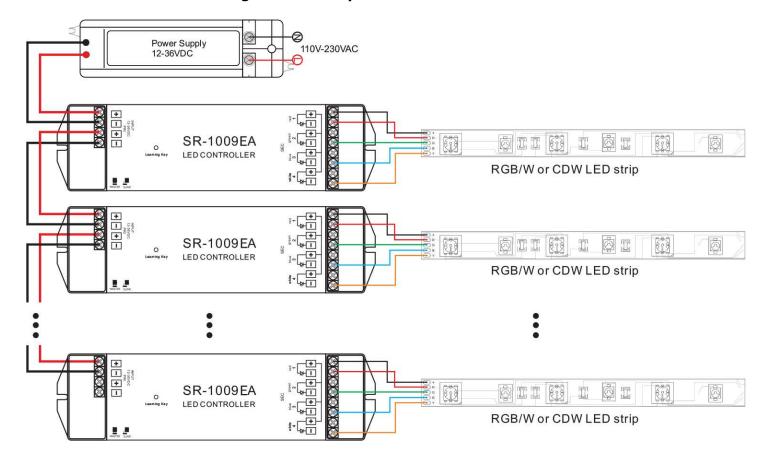

OPERATION

a. Learning (matching)

- a. Do wiring according to connection diagram
- b. Wake up the remote control by touching ON/OFF button.
- c. Press learning button on receiver.
- d. Touch any zone button on remote control.
- e. Then touch color wheel.
- f. Connected LED light will blink to confirm zone designation.
- g. Press at learning button on receiver over 5 seconds until LED light flash, then delete the learned ID.
 - **Note 1:** To choose a master from slaves by jumper for each zone.

Short circuit for master.

Open circuit for slave.

Each zone only can set one master controller. After a period of time, the master will do synchronization

operation to keep the same color or mode of all slaves in one zone.

Note 2: Each remote control 8 zones (areas) receivers, each area can be learned as many receivers as we can.

Each receiver maximally can be controlled by 8 different remote controllers.

SAFETY & WARNINGS

- 1. The product shall be installed and serviced by a qualified person.
- 2. IP20.Please avoid the sun and rain. When installed outdoors, please ensure it is mounted in a water proof enclosure.
- 3. Always be sure to mount this unit in an area with proper ventilation to avoid overheating.
- 4. Please check if the output voltage of any LED power supplies used comply with the working voltage of the product.
- 5. Never connect any cables while power is on and always assure correct connections to avoid short circuits before switching on.
- 6. Please ensure that the cable is secured tightly in the connector
- 7. For update information please consult your supplier.